




Bypassing your Water Softener

Follow the steps below to place your softener into service or bypass mode.

NORMAL SERVICE POSITION

Valves in this position:


- Inlet valve: **OPEN**
- Outlet valve: **OPEN**
- Bypass valve: **CLOSED**

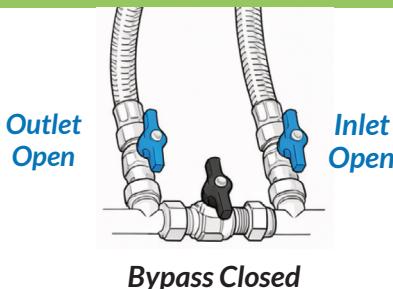

BYPASS POSITION

To bypass the softener:

1. Close the inlet valve
2. Close the outlet valve
3. Open the bypass valve

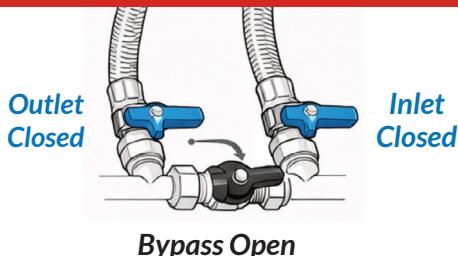

Water will now bypass the softener and flow directly to the property.

Bypass Valve Options

Your system may be fitted with one of the bypass types shown below.

CURRENT BYPASS



Unit in use



Unit in Bypass mode

To bypass: Push the plunger fully in the direction shown.

NEW BYPASS (EXPECTED Q3 2025)



Unit in use



Unit in Bypass mode

To bypass: Turn *both* handles 90° as shown